



Primary Parts

AK4400 - IR3 Key (x2)

PK4401 - Programming Station

Note: If your location is already using an InVue Programming Station, do NOT use the new programming station provided with the kit. Use your existing Programming Station.

Additional Tools Required



PS512 - Power Supply x3 (specific order code will depend on country - sold separately)

OneKEY Setup




- 1 Plug one of the PS512 power supplies into the Programming Station.



- 2 Plug the power supply into a power outlet.



- 3 The LEDs on the Programming Station will illuminate.

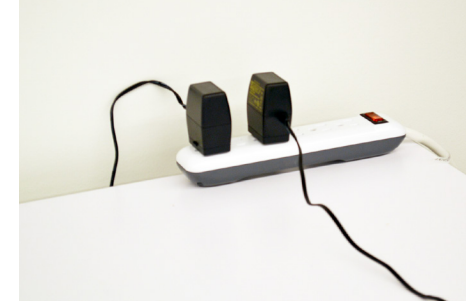

- 4 Plug another PS512 power supply into the power outlet.



- 5 Plug the end of the power supply into the OneKEY. Repeat for any other Keys.



- 6 Allow the OneKEY to fully charge. The LED for the battery indicator will shine green when fully charged.



- 7 To program a OneKEY, place the Key into the port on the Programming Station. Press the button on the Key to transfer the code to the Key. It is now ready for use.
Note: Ensure that the OneKEY is programmed every 12 hours.



- 8 When not in use, plug the power supply into the Key to charge. This will also deactivate the Key. After the Key is deactivated, it must be placed on the programming station before it can be used again.

LED Positions

Programming Station




- 1 Programming LED
- 2 Power LED

OneKEY



- 1 OneKEY Power LED
- 2 OneKEY Battery LED
- 3 OneKEY Activation Time LED


Battery Indicators

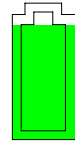

Continue use.



 Battery is low and needs to be returned to the charger.



Battery is too low to use and needs to be returned to the charger immediately.

Activation Indicators



More than 1 hour of activation time remains (continue use).



One hour or less of activation time remains and the key needs to be returned to the Programming Station.



Key is no longer active and needs to be reprogrammed immediately.

Power Indicators



The key activated successfully.



The key did not activate or the battery is too low. Return the key to the charger.



The key did not activate or the key needs to be reauthorized. Return the key to the Programming station.