 






8b


Powered Version (optional): Plug the power cable (ZB4001) into the alarm unit.




Place a coded and charged OneKEY on the lens of the alarm unit and press the button to code the system. 8a Plug a zips sensor into the alarm unit. See the instructions included with each sensor for more information.

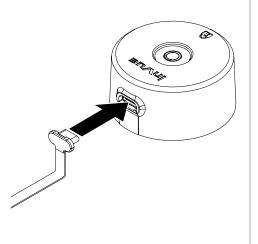

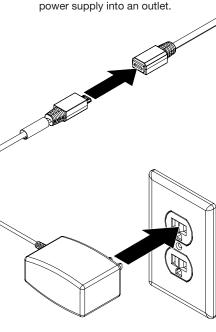


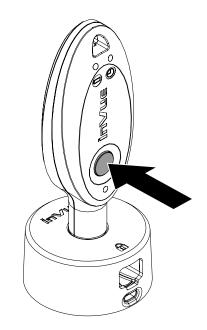

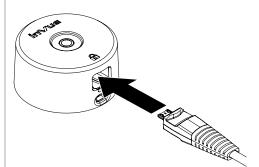


If High Security Plate was used:

Plug the sensor into the alarm unit and align the hole in the sensor with the hole in the high security plate. Secure the sensor with the captured

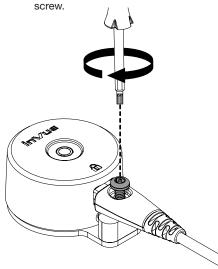

To remove a sensor from the alarm unit; use a charged and coded key to deactivate the unit, then place the magnet key onto the lock icon on alarm unit above the sensor. Push in slightly and unplug the sensor.

9

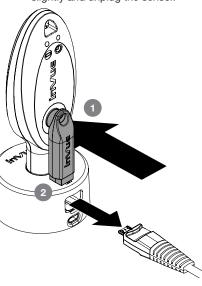

Warning – Fire, Explosion, Burn Hazard: InVue recommends the use of Vinnic, Great Power, Henli Max or Energizer batteries. Use of other batteries, mixing of used and new or different battery chemistries may present a risk of leakage, fire, explosion and serious personal injury. Do not recharge, misuse, short circuit, improperly store or discard, disassemble or heat above 212°F (100°C). Keep away from children. SD0632 Rev4 9/14/21



NA / LATAM // 704.752.6513 • 888.55.INVUE EMEA // +31.23.8900150 APAC // +852.3127.6811

© 2021 InVue Security Products Inc. All rights reserved. InVue is a registered trademark of InVue Security Products.