

LED Positions

Programming Station



 
- 1 Programming LED
- 2 Power LED

OneKEY



- 1 OneKEY Power LED
- 2 OneKEY Battery LED
- 3 OneKEY Activation Time LED


Battery Indicators



Continue use.



 Battery is low and needs to be returned to the charger.



Battery is too low to use and needs to be returned to the charger immediately.

Activation Indicators



More than 1 hour of activation time remains (continue use).



One hour or less of activation time remains and the key needs to be returned to the Programming Station.



Key is no longer active and needs to be reprogrammed immediately.

Power Indicators



The key activated successfully.



The key did not activate or the battery is too low. Return the key to the charger.



The key did not activate or the key needs to be reauthorized. Return the key to the Programming station.