 
 



Zips Single Port Alarm Unit Merchandising Guide

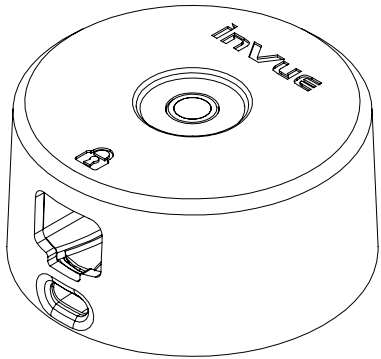


- 1** Use a charged and coded OneKEY to deactivate the Alarm Unit.

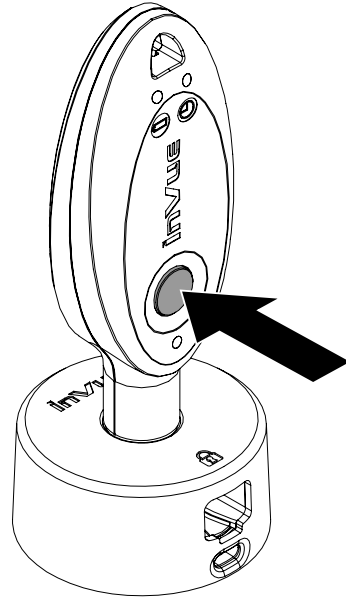

 
- 2** If the Alarm Unit was powered, unplug the power supply from the outlet and unplug the cable from the Alarm Unit.

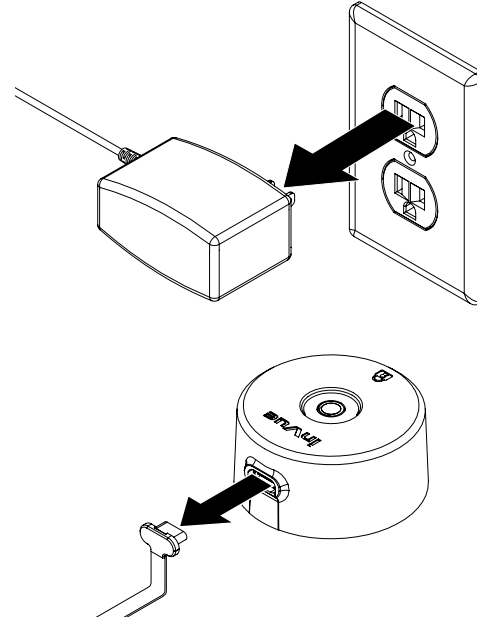


- 3** If removing the Alarm Unit from the position, use the scraper removal tool (DNTX93) to break the adhesive bond between the Alarm Unit and the fixture surface.

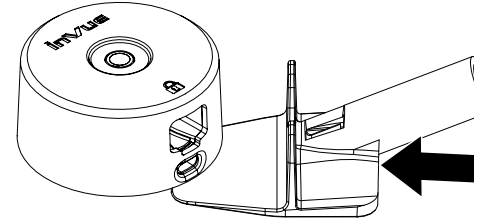

 
- 4** Peel the old adhesive from the Alarm Unit.

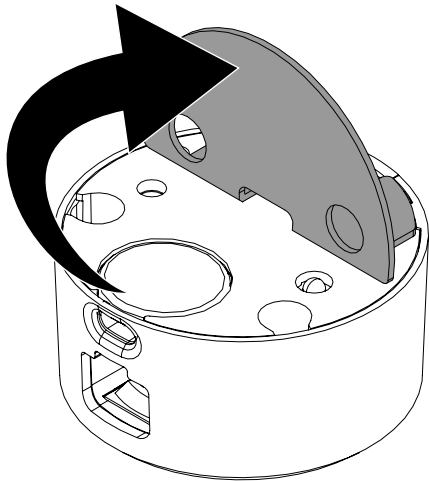

 
- 5** Use an alcohol wipe to clean any adhesive residue from the bottom of the Alarm unit. Allow it to dry completely.

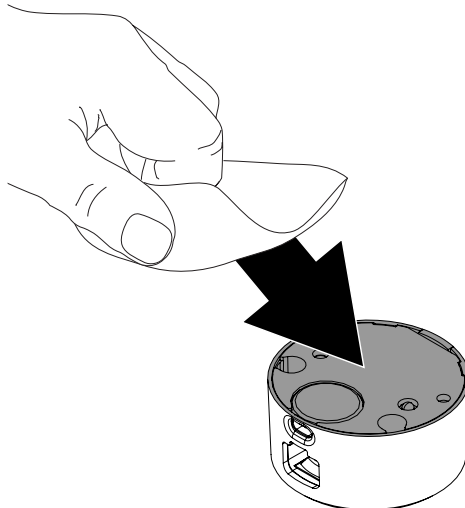


- 6a** If the battery needs to be changed out, use a Philips head screwdriver to remove the 2 screws in the bottom of the Alarm Unit.

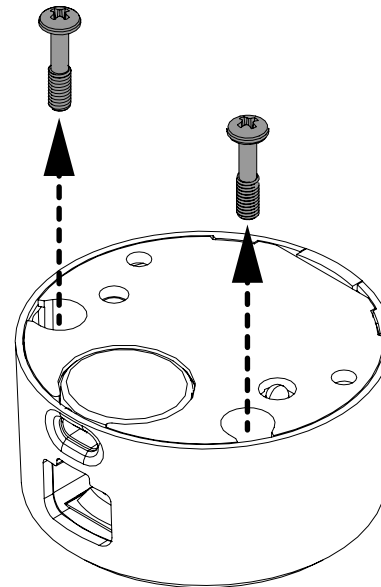


- 6b** Remove the base plate.

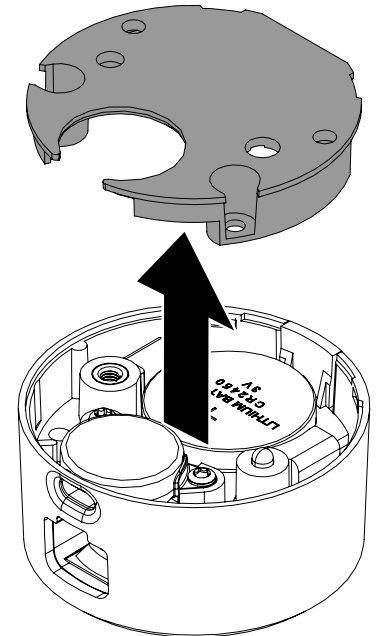


6c Remove the old battery.

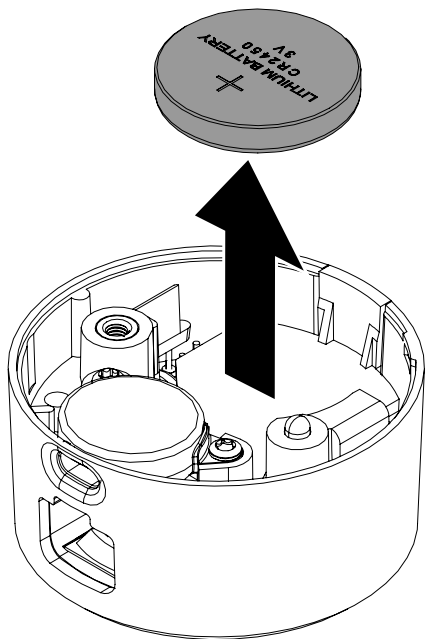 


6d Insert the new CR2450, with the Positive Side (+) facing up, into the battery holder.

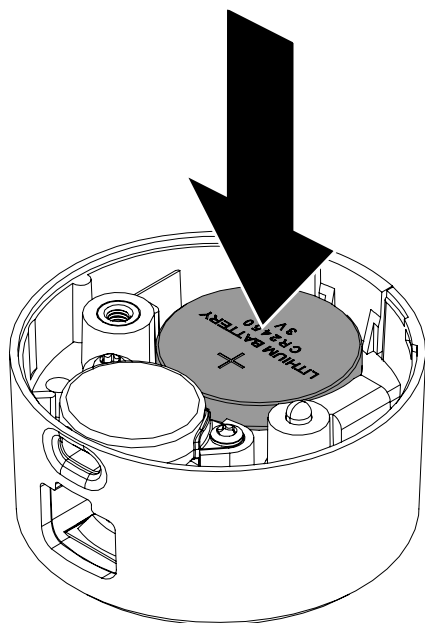

6e Replace the base plate.

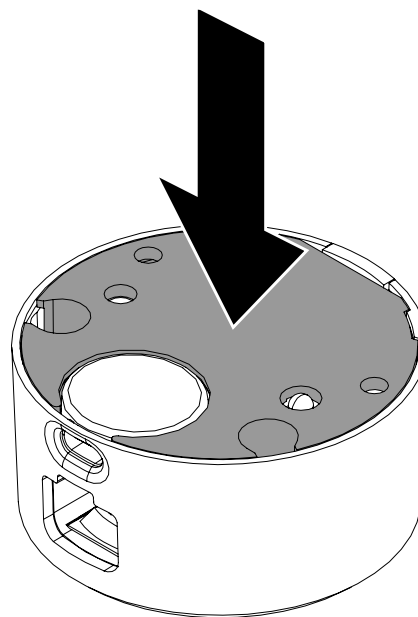


6f Insert and tighten the screws to secure the base plate to the Alarm Unit.

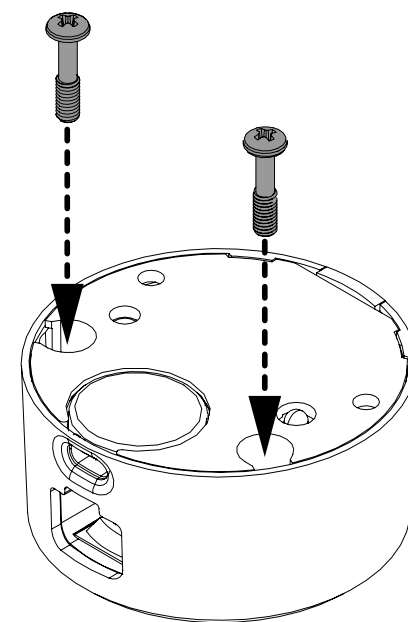

7 Remove one of the replacement adhesives (ADH2308) from its backing and align it with the bottom of the Alarm Unit. Smooth it into place for at least 10 seconds.

 Note: The Alarm Unit is now ready to be reinstalled. Consult the installation guide for more information.

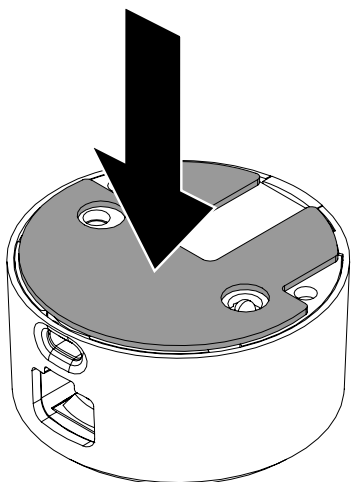

Rev0 8/10/22

inVUE

www.invue.com

NA / LATAM // 704.752.6513 • 888.55.INVUE

EMEA // +31.23.8900150

APAC // +852.3127.6811

© 2021 InVue Security Products Inc. All rights reserved.
InVue is a registered trademark of InVue Security Products.