




- 1a** Use a charged and coded OneKEY to deactivate the inVue product that the sensor is plugged into. For Zips Alarm Units, place the OneKEY onto the IR lens and press the button. Then place the magnet key onto the lock icon on alarm unit above the sensor. Push in slightly and unplug the sensor.

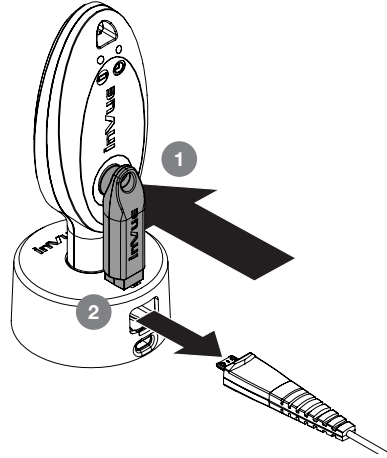


- 1b** If using the S2865 system, place the charged and coded OneKEY onto the Remote IR Dot connected to the system and press the button. Remove the sensor from the S2865 Alarm/Power Box.

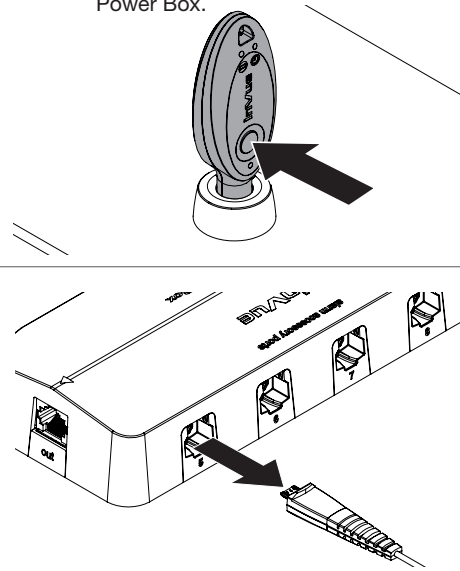


- 2** Peel the clear mylar strip from both sides of the device and sensor.

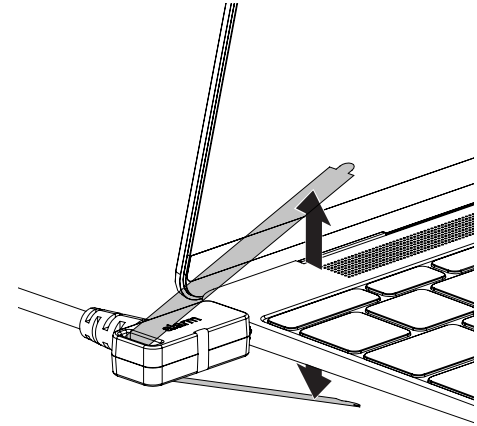


- 3** Use an alcohol wipe to remove any adhesive residue on the device and sensor.

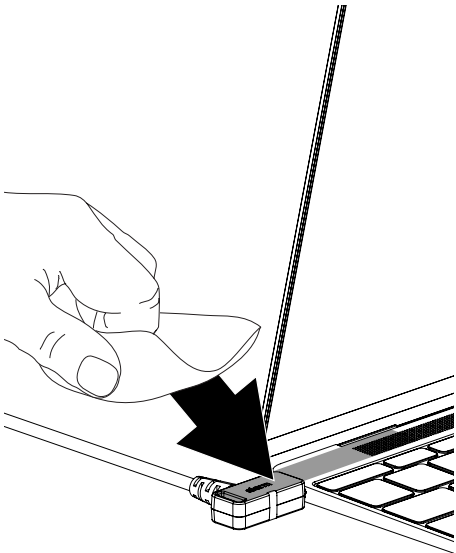

- 4** Unplug the sensor from the device.

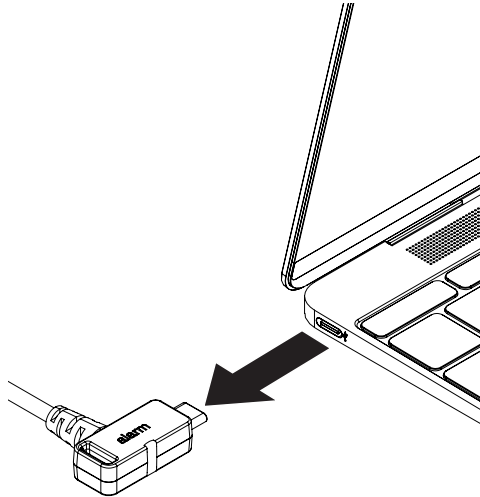

- 5** Unplug the OEM power supply from the port on the sensor cable.
Note: The sensor is now ready to be reinstalled. Consult the installation guide for more information.

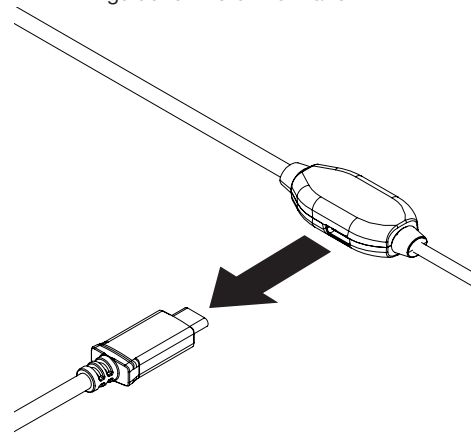

Note: If reinstalling the sensor with new mylar strips, new strips are included in the ADH2131 kit.

Rev0 08/15/22

INVUE

www.invue.com

NA / LATAM // 704.752.6513 • 888.55.INVUE

EMEA // +31.23.8900150

APAC // +852.3127.6811

