

WS2/W2000 Apple Watch Flex Tray Sensors ZW1921-22 & ZW1941-42 Installation



- 1 Open the polish packet included in polish kit ADH2300.



- 2 Squeeze a few drop of the polish compound onto the included microfiber cloth.



- 3 Carefully rub the polish onto the corners of the wearable for 15-20 seconds.



- 4 Use a clean portion of the cloth to buff out the polish for 15-20 seconds.

ZW1921-22 Installation



- 5 Use a provided alcohol wipe to clean the bottom and sides of the wearable. Allow it to dry completely.



- 6a Ensure that the red pull tabs lay flat against the bottom of the tray sensor.



- 6b Insert the dial side of the watch into the tray sensor so that the corners of the wearable sit against the adhesives.



- 6c Pivot the other side of the wearable down into the tray sensor.

WS2/W2000 Apple Watch Flex Tray Sensors ZW1921-22 & ZW1941-42 Installation


ZW1941-42 Installation



7a Ensure that the red pull tabs lay flat against the bottom of the tray sensor.



7b Remove the buckle band from the device.

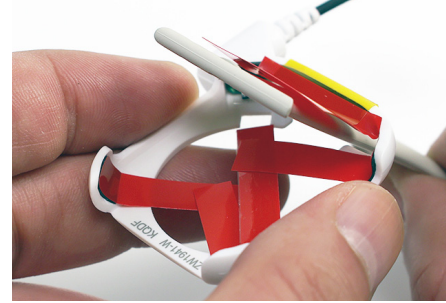

7c Insert the band through the gap on the back side of the tray sensor. Ensure that the band sits between the upper bridge adhesive and the lower tray adhesives.



7d Reattach the buckle band.



7e Place the device into the tray sensor. Pull the red tab to expose the upper bridge adhesive.



7f Ensure that the dial fits into the cut out on the tray sensor.



8 Flip the wearable over and pull all of the red tabs out through the opening in the bottom of the tray sensor.



9 Press all adhesives on the tray sensor against the wearable for at least 10 seconds.

WS2/W2000 Apple Watch Flex Tray Sensors ZW1921-22 & ZW1941-42 Installation




- 10** Lift the band clamp/sensor end from the stand.



- 11** **Optional:**
If the cable stop clip is available, pull enough cable to allow for easy installation. Close the cable stop clip over the cable to prevent it from recoiling.



- 12a** **Optional:**
If present, remove the existing band clamp from the sensor end by loosening the screw with a TT8 bit.

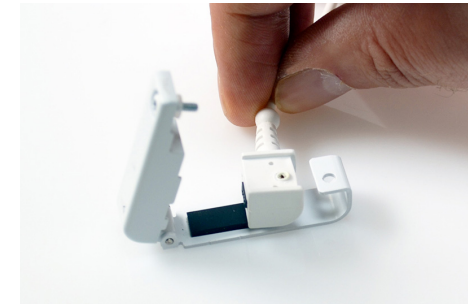

- 12b** Slide the sensor end from the existing band clamp.



- 13** Slide the provided band clamp onto the sensor end so that the screw holes align.



- 14** With the wearable facing down, place the back band into the band clamp as shown.



- 15** Plug the sensor on the flex tray into the sensor end of the stand.




- 16** Close the band clamp over the band.

WS2/W2000 Apple Watch Flex Tray Sensors ZW1921-22 & ZW1941-42 Installation



17 Use a TT8 bit to tighten the screw on the band clamp.

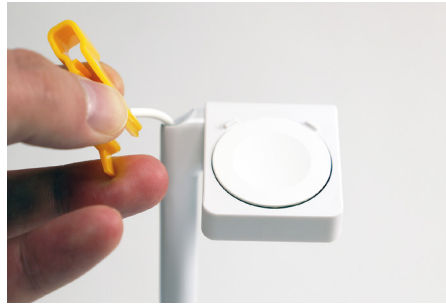

18 If used, remove the cable stop clip from the cable.



19 Place the wearable and tray sensor onto the charging cradle.

Note: Consult the instructions included with the stand to finalize installation.