

InVue Installation Instructions

ADH2300



Rev2 9.12.2018

InVue Parts



DESCRIPTION
Polish Packet



DESCRIPTION
Microfiber Cloth




InVue Customer Service **888.554.6883** (option 2)
Hours: 8 AM - 5 PM EST


Application



1 Open the polish packet.

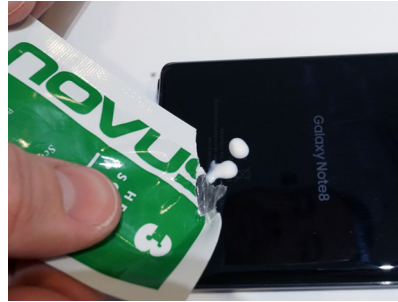

2 Squeeze a small amount of polishing compound onto the back of the device where the sensor will be placed.

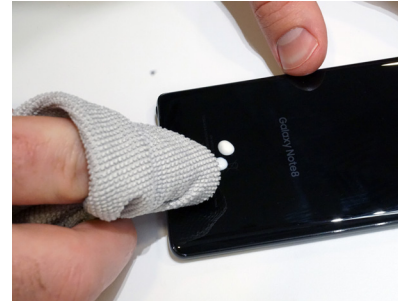

3 Use the microfiber cloth to firmly rub the polishing compound onto the device for 15-20 seconds.



4 Use the microfiber cloth to firmly buff the back of the device.

Note: A visual difference may not be apparent.

5 The device is now ready to have an LSE plate or other adhesive applied to the surface.

Note: Repeat the process for any additional devices.