

InVue


Custom Alarming Stylus Tether & Tray ZA2720-G/W, ZA2503-G

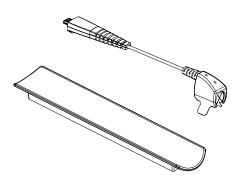


Clean the stylus with the provided alcohol wipe. Let it dry completely.

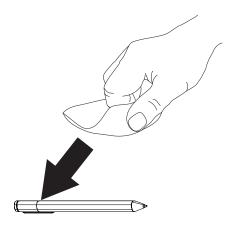


Insert the stylus into the sensor. Align the sensor with the end of the stylus as shown below.

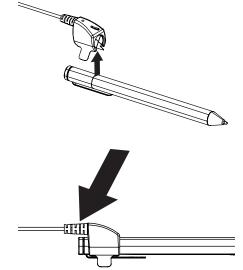



Pull the tabs on the adhesives and pinch the sensor against the stylus for at least 10 seconds.



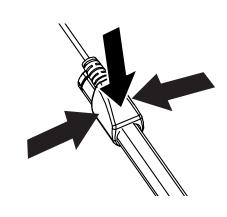


Plug the micro USB connector into a Zips! 2.0 alarm unit. The alarm unit will chirp.

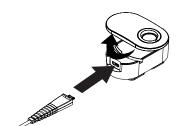


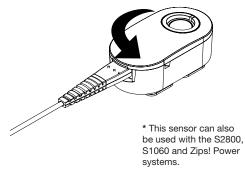

Clean the surface where the tray will be mounted with the provided alcohol wipe. Let it dry completely.

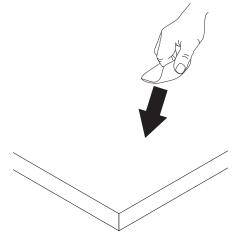

Remove the clear film from the adhesives.



Firmly press the tray against the surface for at least 10 seconds.

